


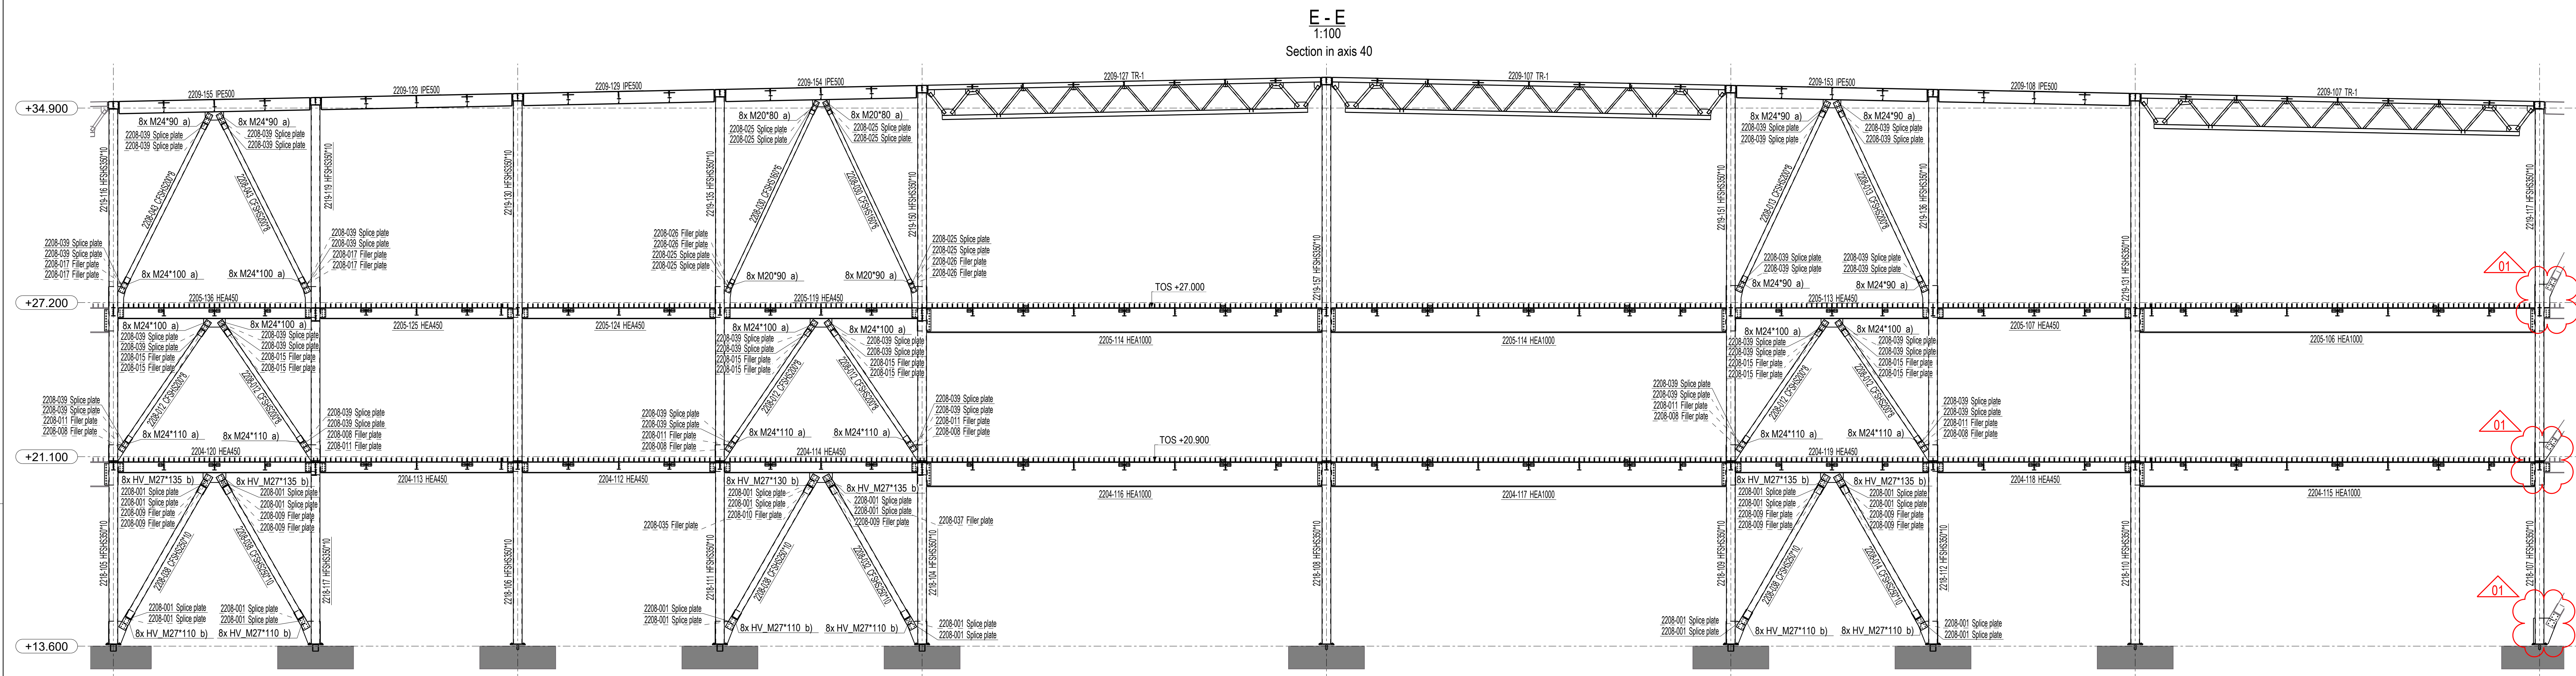
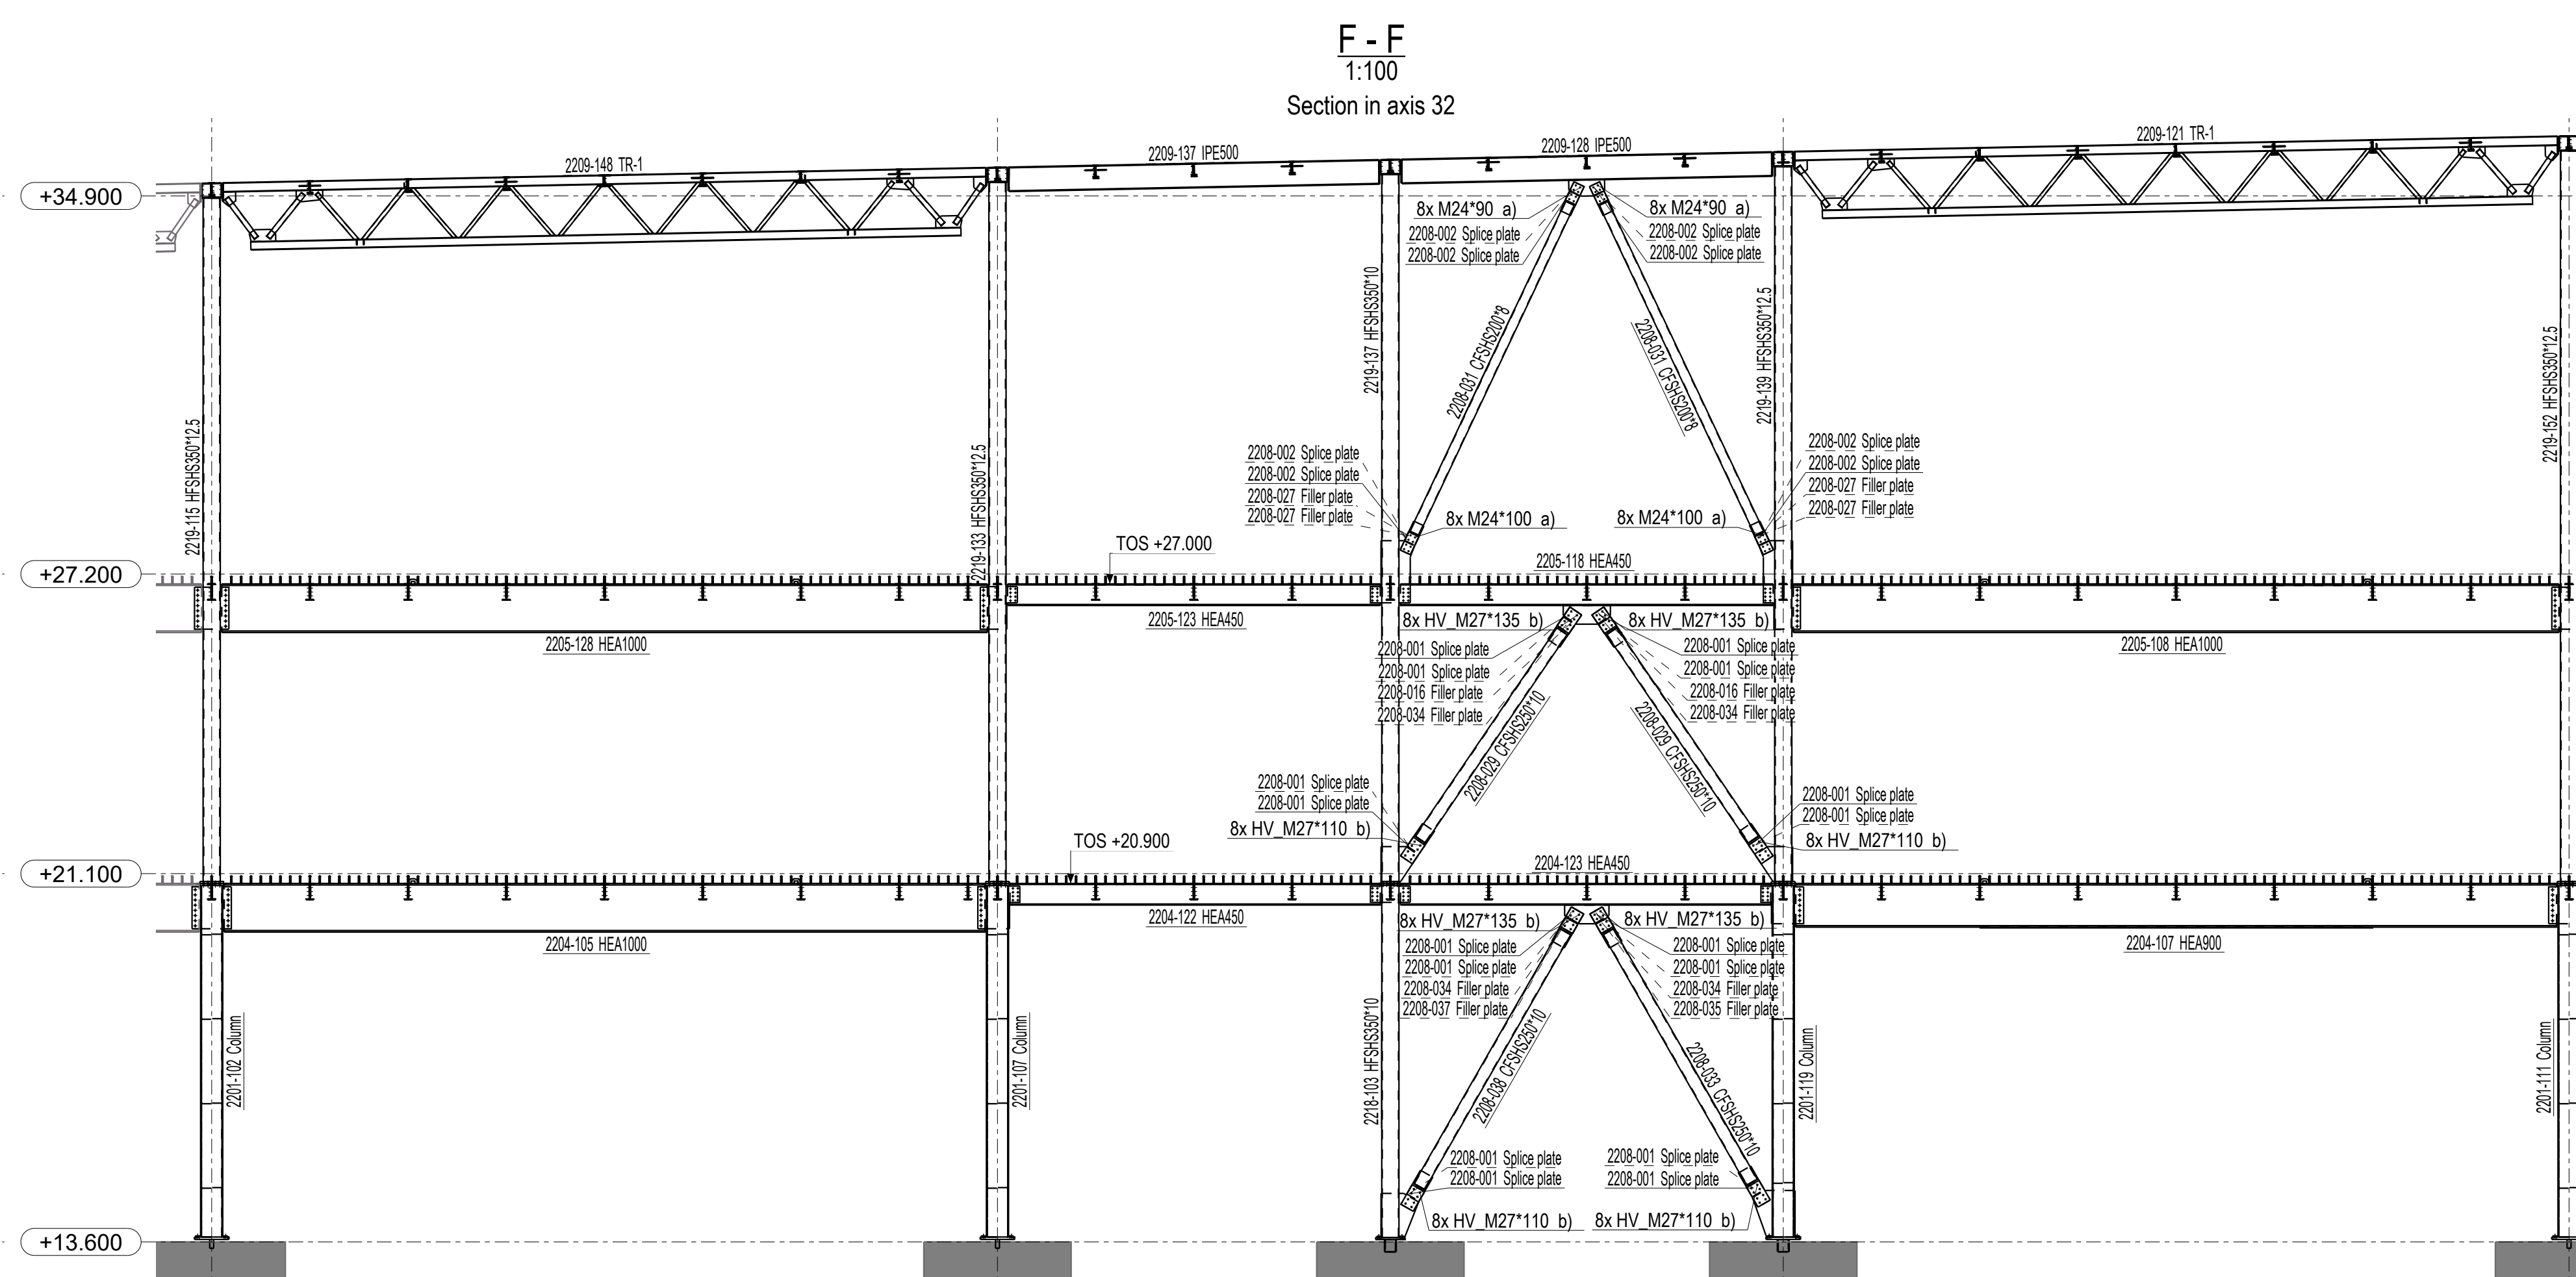


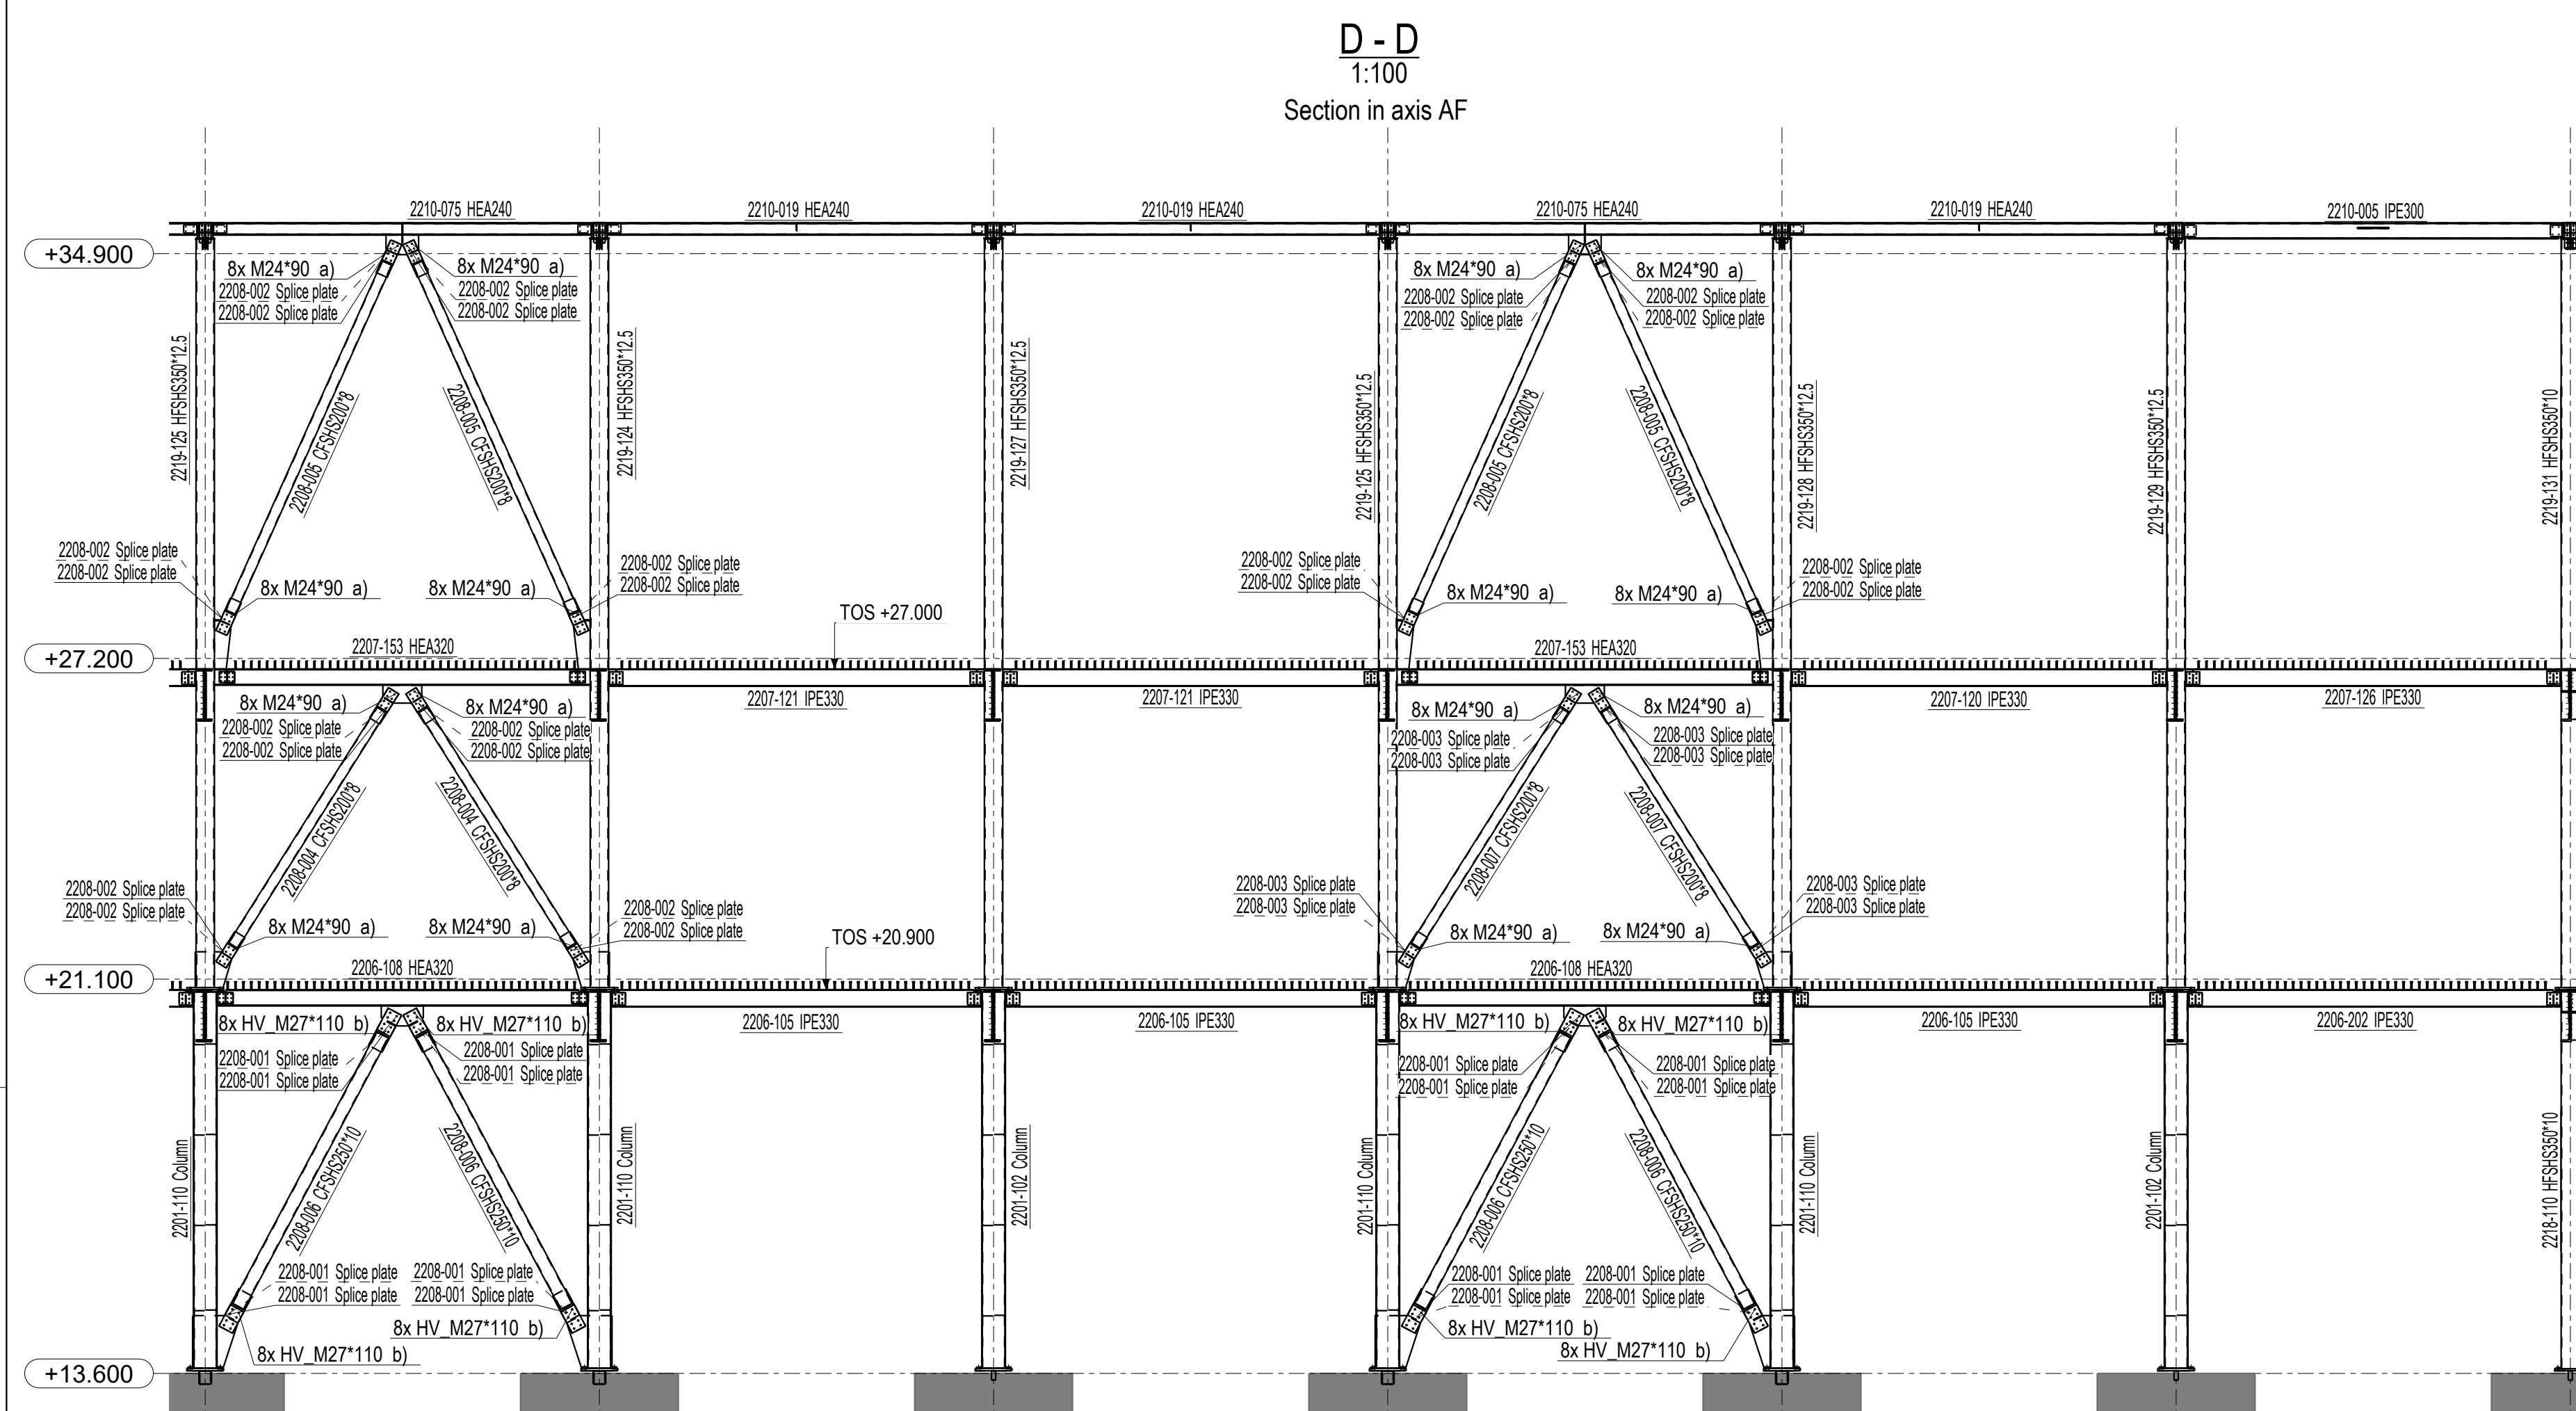


ASSEMBLY NOTES:
1. Bolts in purflins should be installed from the web side of the purflin, not from the stiffener side

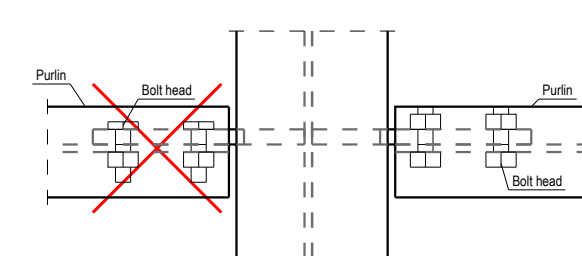

Detail for the location of Filler plates

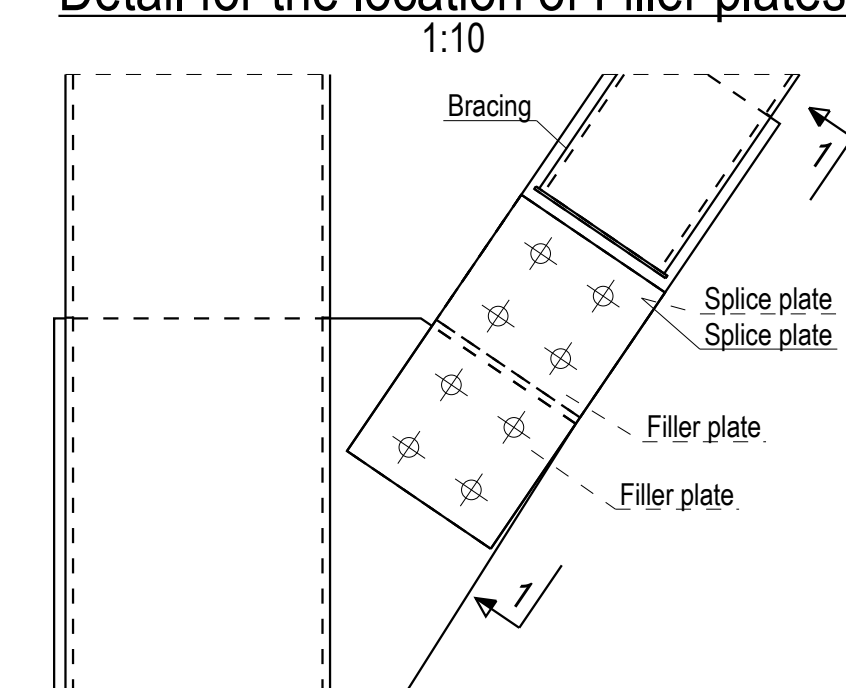

1-1
1:10

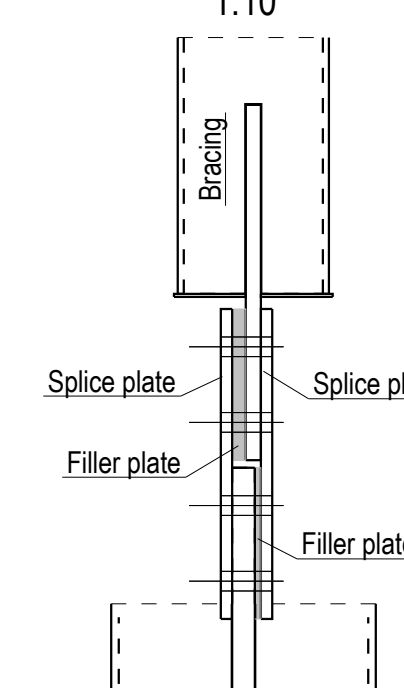

NOVO

PROJECT NAME

NOVO N01

CONSULTANT LOGO

Jakosta