




Top view
1:100

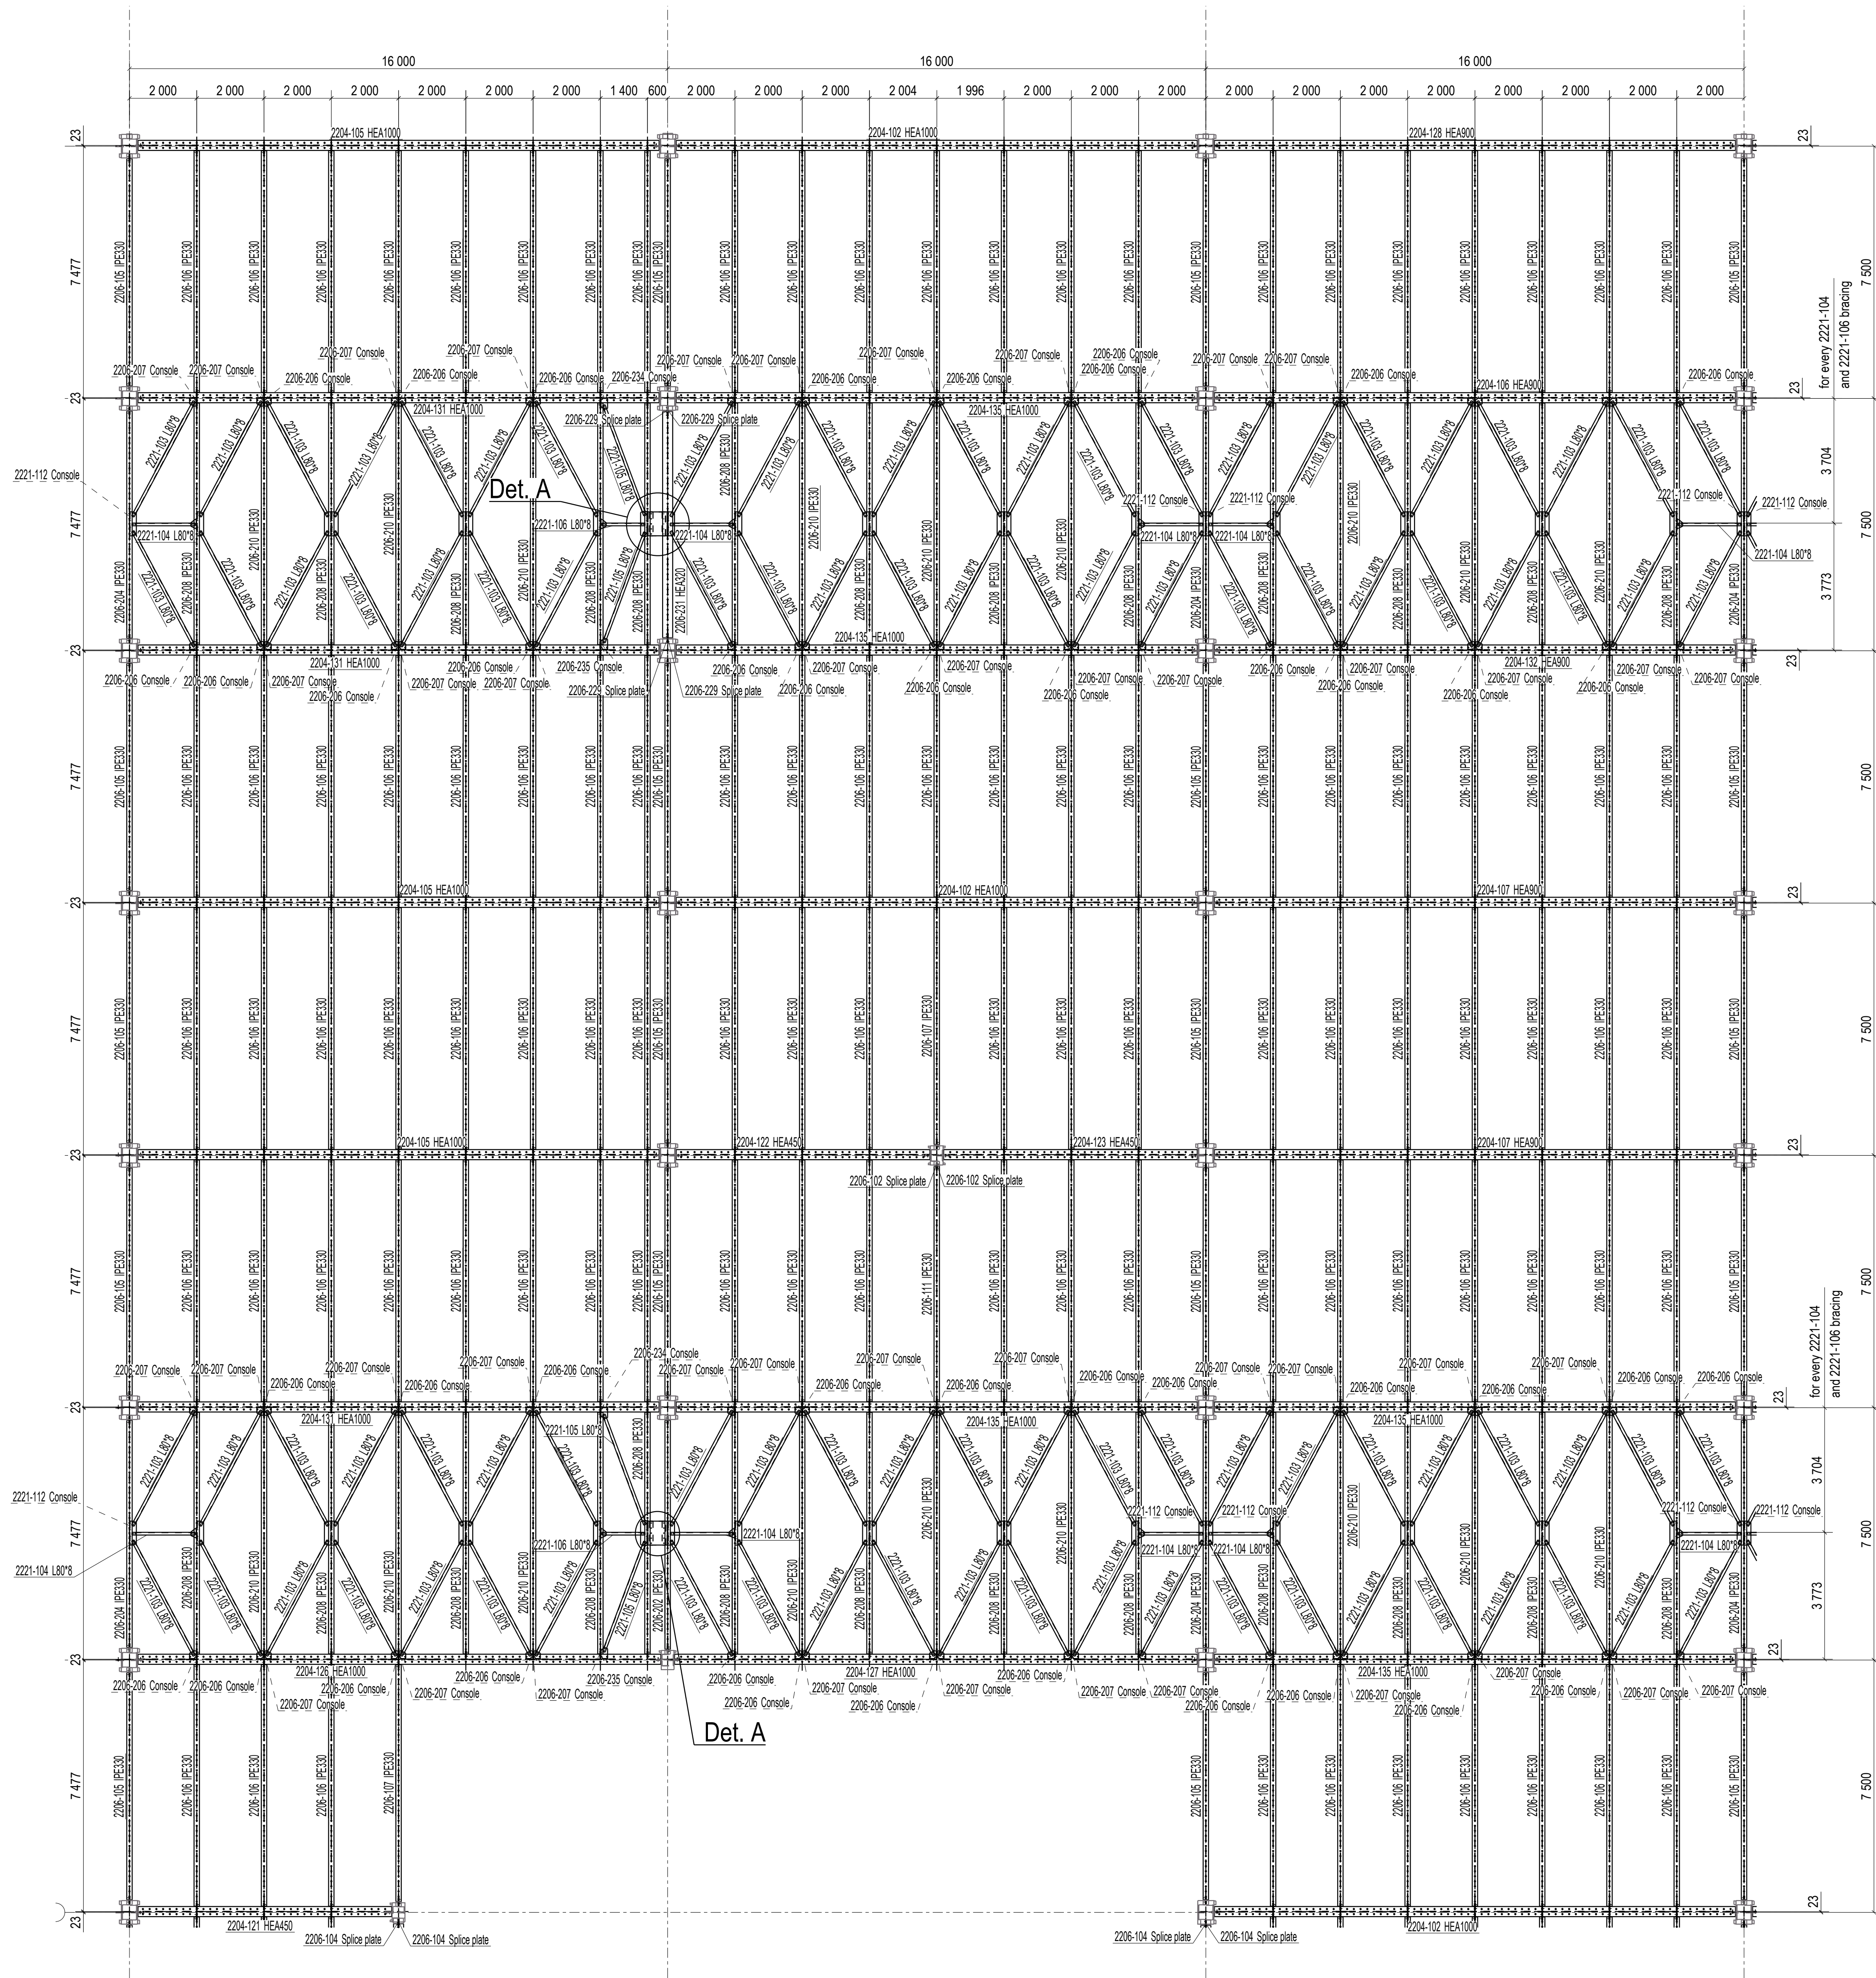


Detail of consoles
connecting two parallel HEA/IPE profiles
1:10

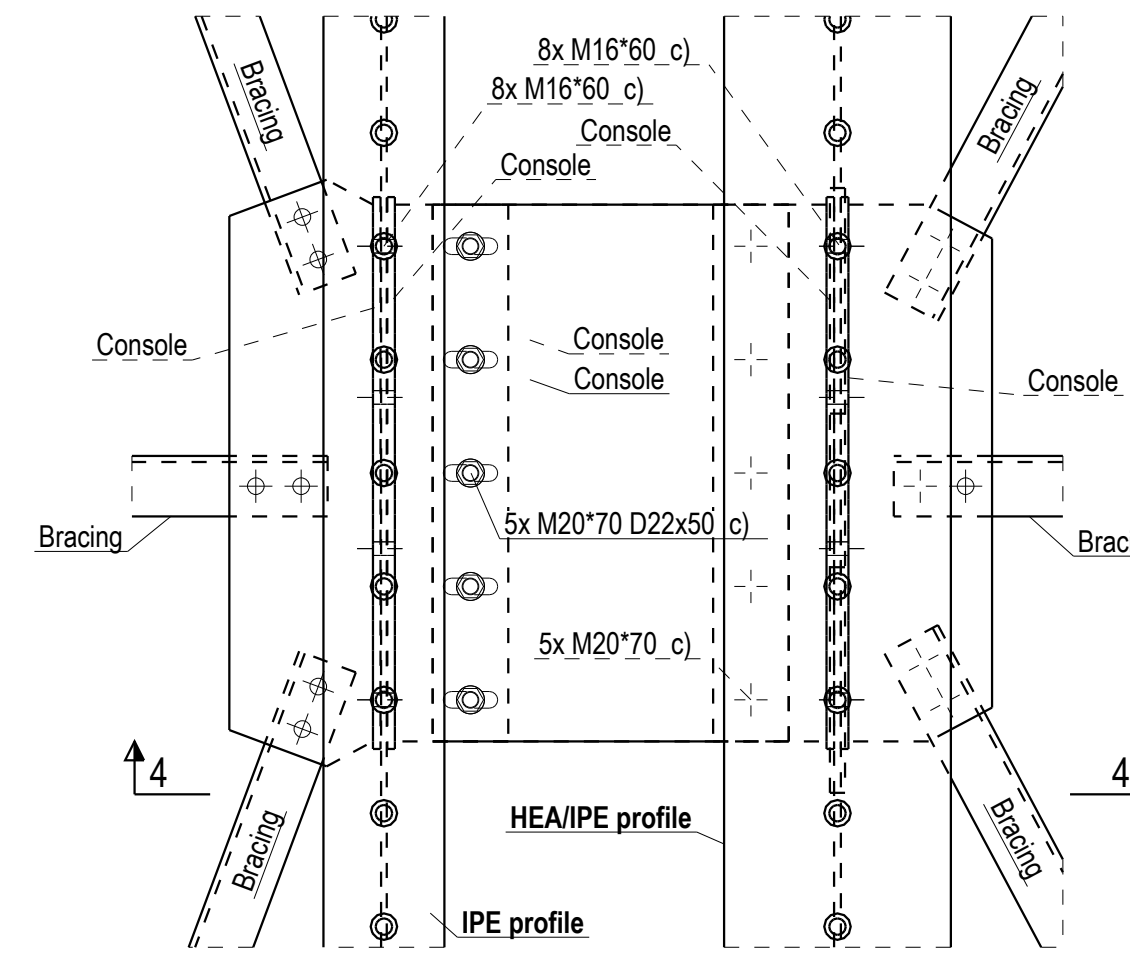


Detail of 2221-113 Console
on both sides of the profile
1:10

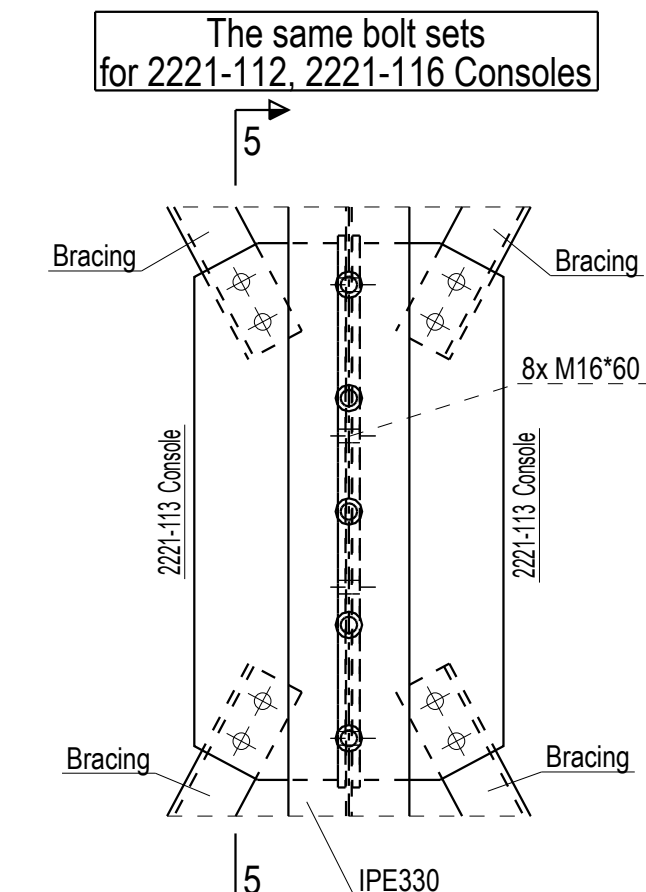


Detail of Consoles
2221-119 and 2221-113
1:10

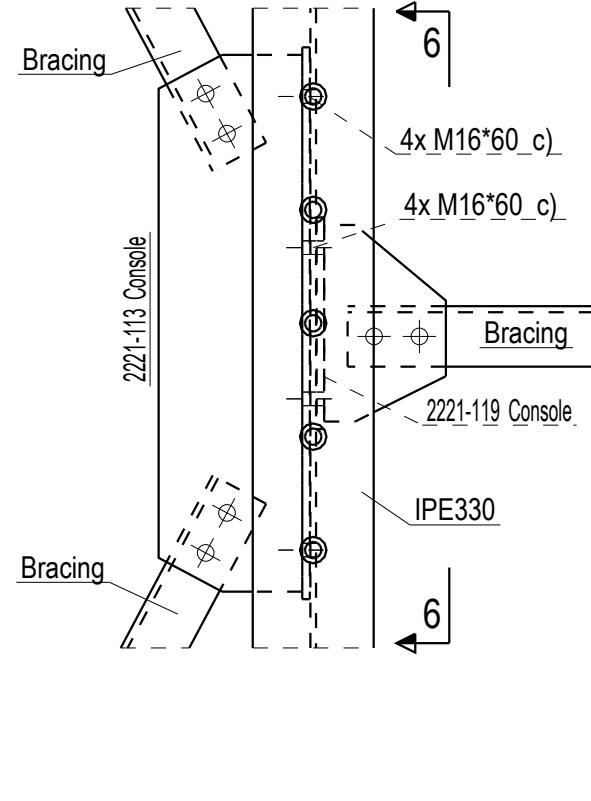


Detail of the connection
of HEA450*/HEA900/HEA1000 with IPE330 profile
using two "corner" consoles
1:10

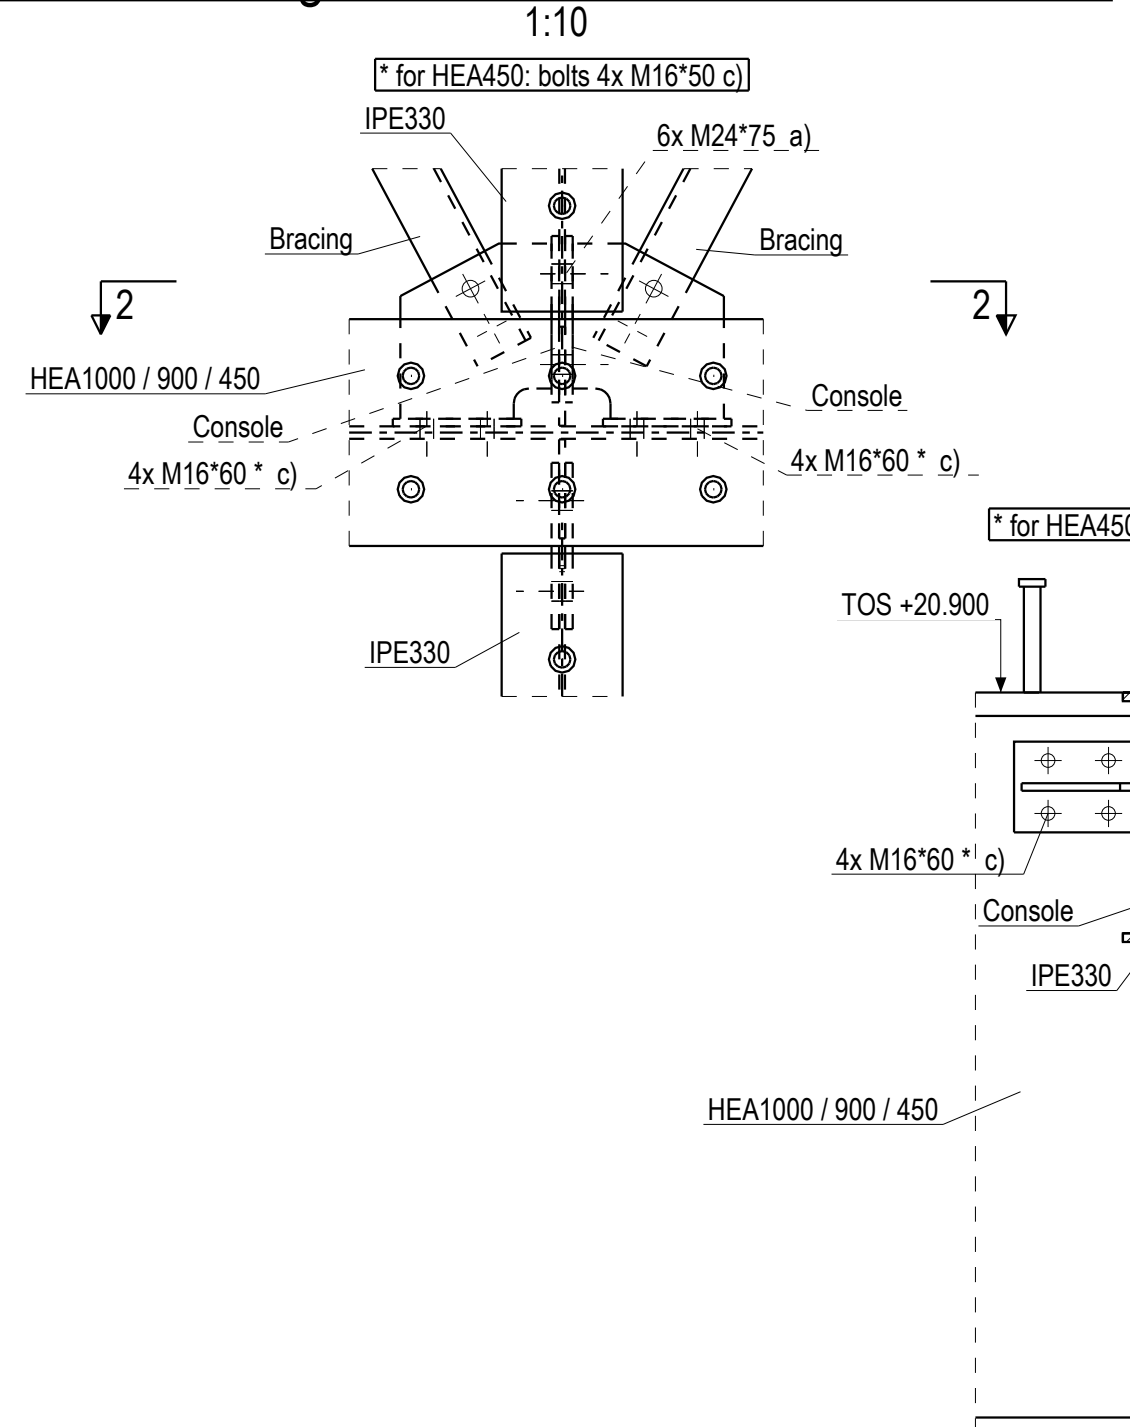


Detail of the connection
of HEA450*/HEA900/HEA1000 with IPE330 profile
using one "corner" console
1:10

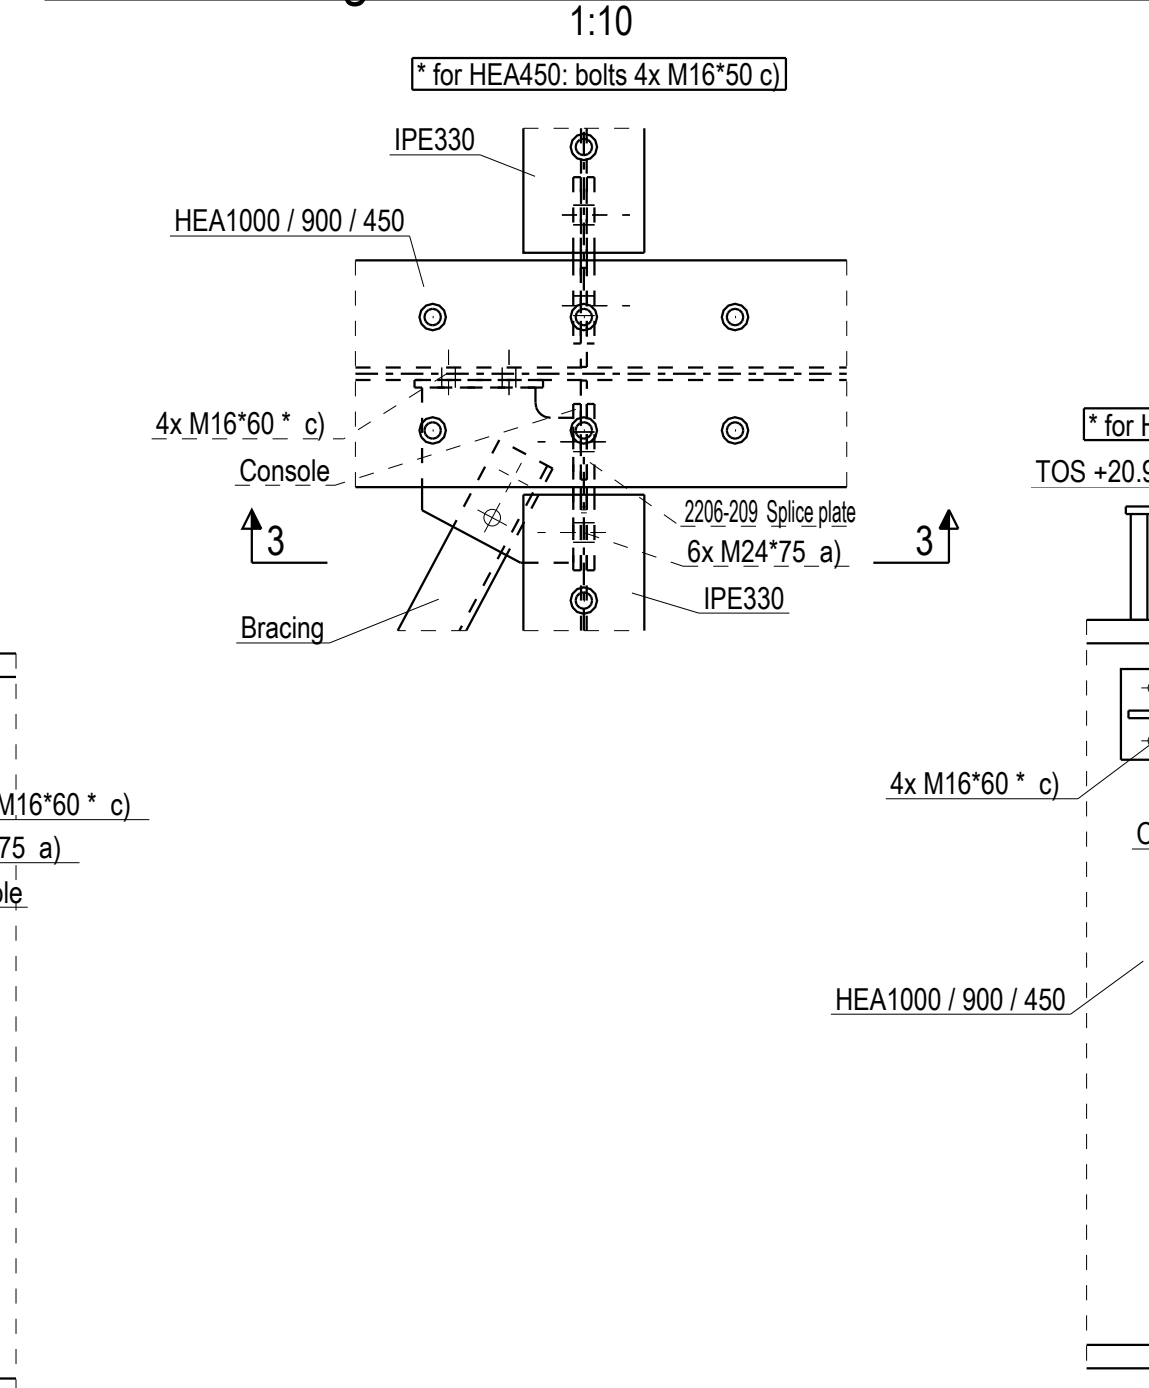


Detail of the connection between
HEA1000/HEA900/HEA450 and IPE330 profiles
1:10

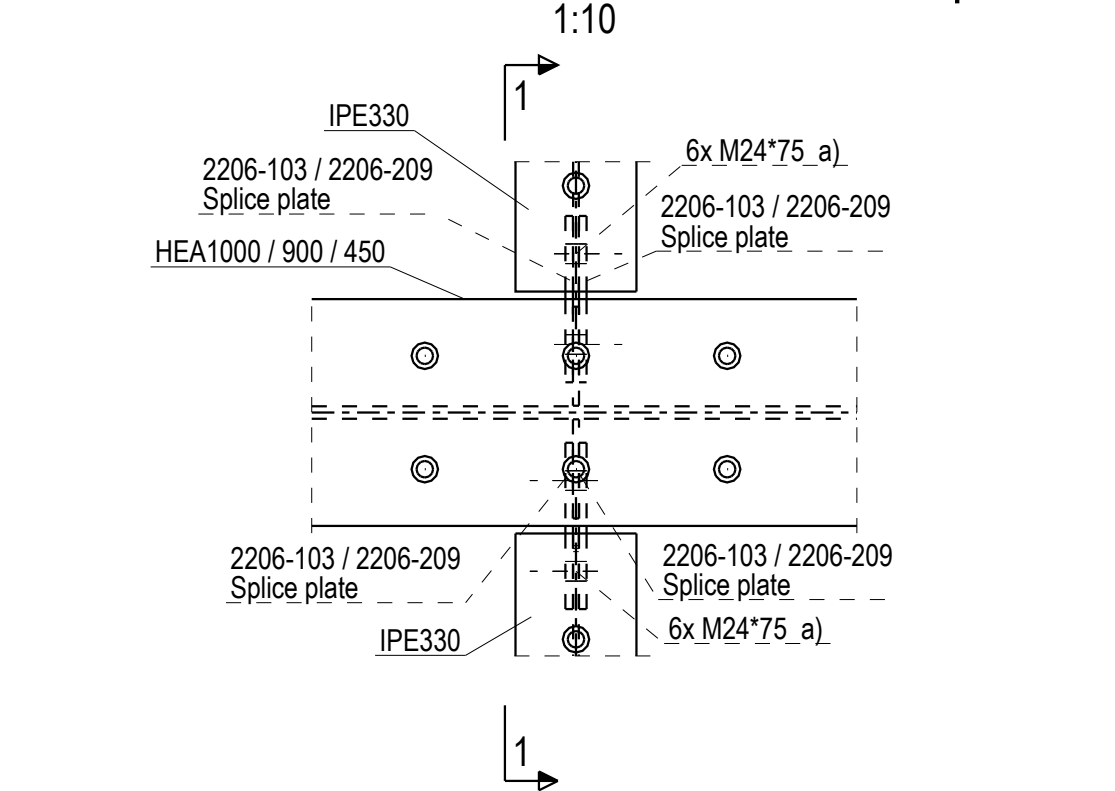


Detail of the connection
of HEA900 and HEA1000 profile
with column
1:10

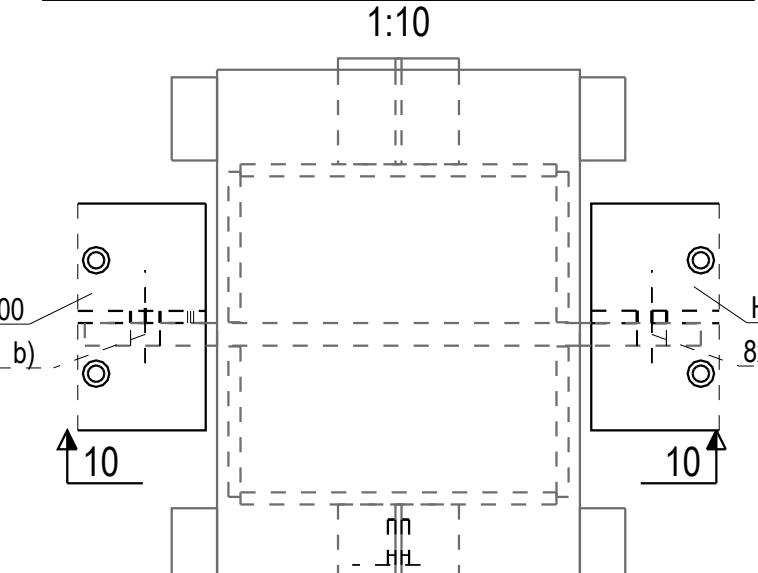


Detail of the connection
of HEA450 profile with column
1:10

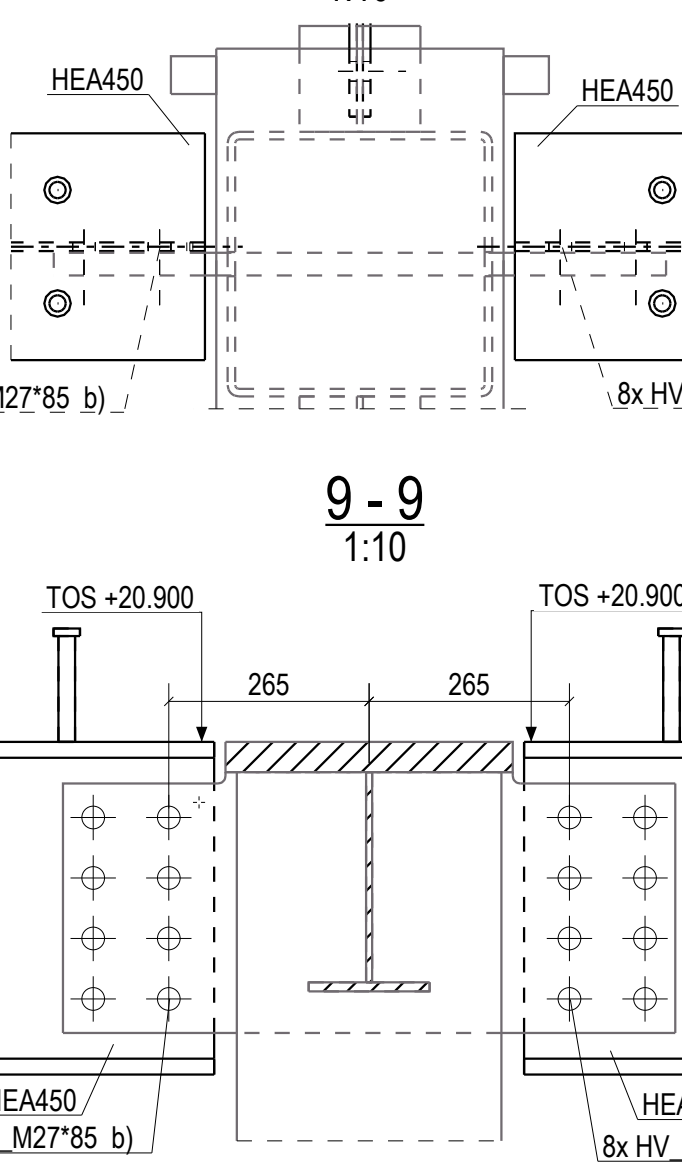


Detail of the connection
of HEA320 profile with column
1:10

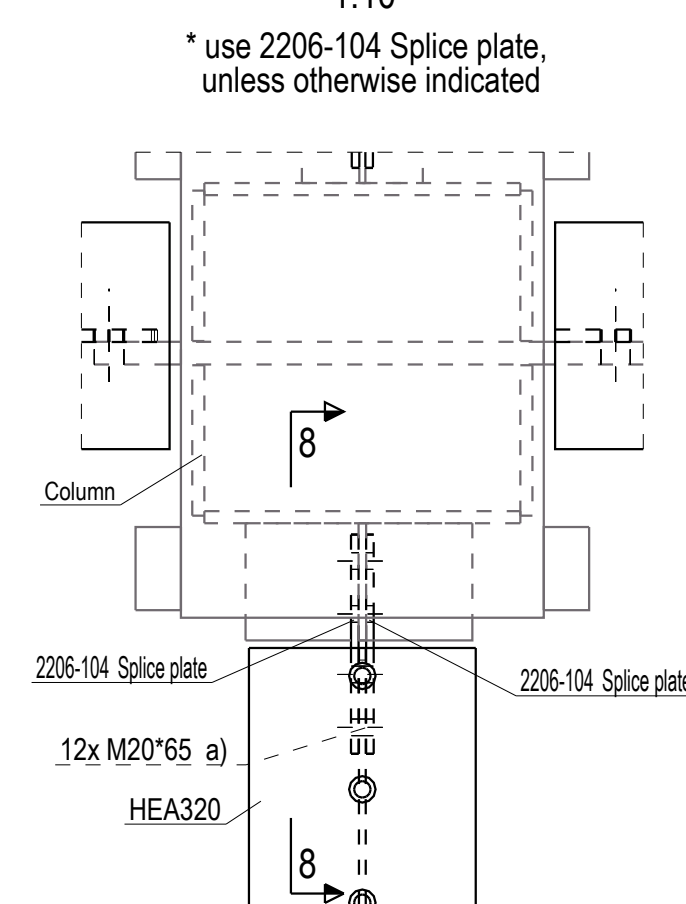

Detail of the connection
of IPE330 profile with column
1:10

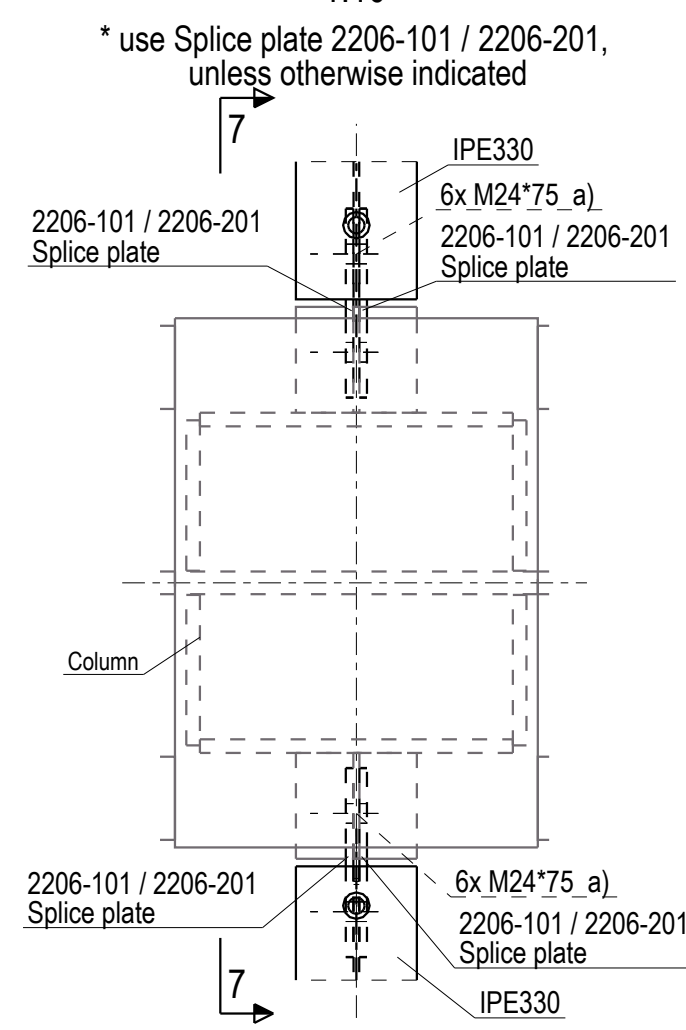

ASSEMBLY NOTES:
1. Bolts in purins should be installed from the web side of the purin, not from the stiffener side.

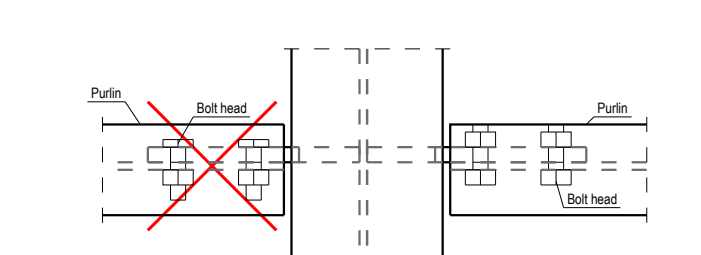

NOVO

PROJECT NAME
NOVO N01

CONSULTANT LOGO
JAKOSTA

RESPONSIBLE
STRUCTURAL

CONSULTANT
JAKOSTA P.S.A.